



The installation must only be performed by a licensed electrician.

To prevent death, injury or damage to property, this product must be installed in accordance to National Electrical Code (NFPA70) in the US or Canadian Electrical Code (CSA22.1) in Canada.

Disconnect power before installing the product or servicing it.

Wait until fixture has cooled down before installing or servicing the fixture.

TOOLS & SUPPLIES Jigsaw or reciprocating saw

#2 Philips head screwdriver

5/16" nut driver

1. After unpacking the fixture and LED driver, use a #2 Phillips screw driver to remove the driver cover.
2. Determine mounting method DW-11 (recessed) or SSMK-1 (surface mount).
3. If using DW-11 mount follow steps 4-15. If mounting with SSMK-1 box, mount SSMK-1 Box to junction box, proceed to step 8. Note: SSMK-1 box is compatible with the following junction boxes (1900, 2000, 3-0, and 4-0).
4. Install 4 support brackets provided with DW-11 see Figure 6. Remove screw from frame and use to attach support brackets to frame. Note the brackets are directional and need to be installed in the correct location.
5. Using a jig saw or reciprocating saw, cut 11" x 11" square hole in soffit or mounting surface.
6. Place fixture mounting bracket and align tabs with hole cut in step 5. (Figure 1)
7. Secure mounting bracket (both sides) by loosening slider arm locking screw, slide mounting arms outward to the desired length and secure by wood screw or hammering slider spike into wood framing. (Figures 2, 3 and 4)



FIG 1



FIG 2



FIG 3



FIG 4

8. Hang fixture initially by one mounting spring only. Place mounting spring on mounting bracket and release spring to secure. (Figure 5)
9. Locate high voltage wires.
10. Connect input power by joining Black wire to Load, White to Neutral and Green to Ground with approved electrical connector.



DW-11



SSMK-1

FIG 5

11. Place LED driver cover on LED driver box and secure with LED driver cover screw.
12. Once electrical connection has been made and LED driver cover has been secured, place secondary mounting spring in spring seat same as in Step 8.
13. Push up on fixture to lock into place.
14. Optional screw support brackets into soffit (Figure 6).
15. Energize fixture.

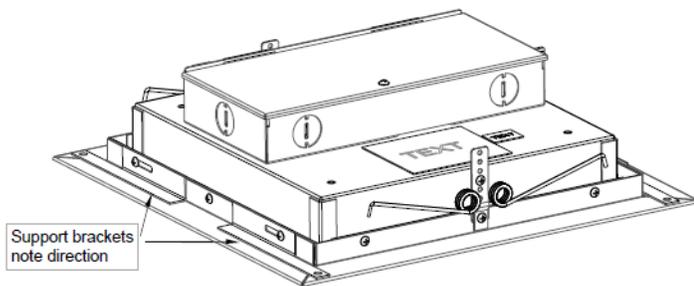


Figure 6